

Grease Seal Removal

by Tom Endy 2022

The removal of the grease seal in a rear brake drum can be made easy with a simple tool. Take an unserviceable rear axle shaft and cut the threaded end off at six inches. Insert it down into the taper in the drum. Slip a curved crow bar under the lip of the seal and using the cut off axle as a platform, pry the seal out.

Tool to remove rear grease seal from brake drum (photos from ford barn)

